TROUBLESHOOTING

If you lose suction while vacuuming turn of your unit and try the following:

1. Check vacuum hose for obstruction. If needed the hosing can be removed by depressing the the button (image below) where the hose connects to the unit. Once removed, the hose can be checked by dropping a coin through from one end to the other.

2. Check plastic tube (#10) for obstructions.

3. Check tools to make sure openings are not blocked.

4. Make sure that bag (#12 or #13) is not full.

5. Check Hepa Filter (#3), if it has turned brown it will need to be replaced. Make sure filter is replaced after every 6th bag replacement.

For any question or concerns please contact us at:

1 (800) 727-7129
10606 Bluff Bend Drive
Austin, Texas 78753

BACK UP

BACK PACK VACUUM CLEANER

USER MANUAL

ABC-2112

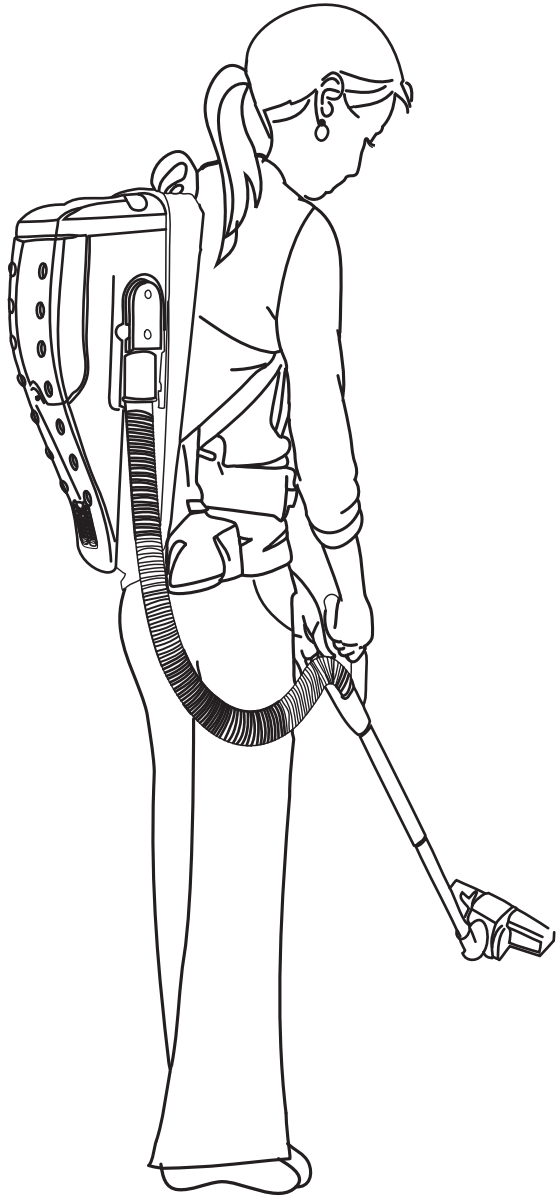

READ ALL INSTRUCTIONS BEFORE USING

WARNING-To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before servicing.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
3. Use only as described in this manual. Use only manufacturer recommended attachments.
4. Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take to a service center.
5. Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle plug or vacuum cleaner with wet hands.
8. Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce airflow.
9. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
10. Turn all controls off before unplugging.
11. Use extra care when cleaning on stairs.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present
13. Unplug before connecting the hose.
14. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
15. Do not use without dust bag and/or filter in place.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or metal capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance

SAVE THESE INSTRUCTIONS

Getting to know your Back Pack Vacuum Cleaner

Design Features

- Back Pack design is easy and movable
- Handle power switch easy operate
- Handle insert storage
- Power cord wrapped benefit for storage

Intended Use

The appliance is intended for personal home use. Use in a commercial or industrial environment is subject to the appropriate regulations.

COMPONENTS AND EQUIPMENT

1.) Vacuum Cleaner
2.) Suction Hose
3.) HEPA Filter
4.) Power Cord
5.) Upholstery Tool
6.) Carpet and Floor Turbo Tool
7.) Combo Crevice Tool (with small brush)
8.) Dusting Brush
9.) Floor Brush
10.) Plastic Tube
11.) Hand Turbo Tool
12.) Cloth Bag (optional)
13.) Paper Bag
14.) Mesh Tool Bag

A FEW MINUTES FOR YOUR SAFETY

SAFETY INSTRUCTIONS

Danger from electricity
This device uses a dangerous electrical voltage. Do not use it when the main cable is defective or if the device has other visible damage. Never open the casing, leave this to repairs specialists. Do not suck up red hot ashes, glowing cigarette ends or matches, nor sharp objects, glass splinters, water or other liquids. These can damage the vacuum cleaner and could put you in danger. Red hot ashes, glowing cigarette ends etc. can set the filter on fire. Dampness can lead to short circuits. Sharp pointed objects damage the filter.

Danger!
Never expose the vacuum cleaner to the effects of the weather (rain, etc.). Always unplug the vacuum before cleaning or servicing it (e.g. removing the filter).

Important!

- Never pull the plug out of the socket by tugging the cable, but always grip the plug body itself. Children are frequently unaware of the dangers of electricity or underestimate these. For this reason children should never be allowed to work with electrical devices.
- Despite the filter it is possible that a small quantity of dirt is present in the vacuum cleaner exhaust air. This can be breathed in by children and result in allergic reactions. For this reason, do not use vacuum, if possible, when children are nearby.
- Never sit on or place things on the vacuum cleaner body.
- Only use the vacuum cleaner when a filter and a motor protection filter have been fitted. The filter must not be damaged!
- Before vacuum cleaning a shampooed carpet, wait until it is completely dry. Never leave the vacuum cleaner close to a heater or an oven. If there is a change of owner or user do not forget to pass on the operating manual.

In the event of damage to the device or for repairs, contact the customer service dept.: 1-800-727-7129 Faults resulting from improper use, failure to follow the instructions in the operating manual, or from damage caused or repairs done by third parties are ruled out under the guarantee. This also applies to the wear of component parts, e.g. the filter.

PREVENTION

Switch off the vacuum cleaner immediately if the air intake, the floor brushes, or the tube become blocked. Before starting the vacuum cleaner up again remove the object causing the blockage:

1. Never use the vacuum cleaner in the immediate vicinity of hot objects and do not suck up hot objects such as cigarette ends or ashes.

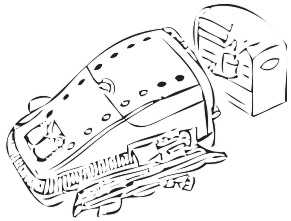

2. Only place the plug in the socket when your hands are dry.

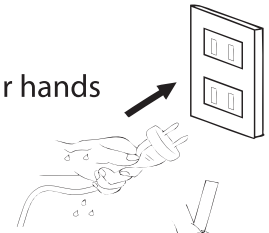

3. Please remove large of sharp objects from the floor before using the vacuum cleaner to avoid any possible damage to it.

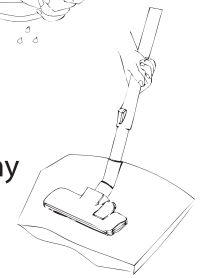

4. Do not pull by the main cable when pulling out the plug; grip plug to remove from outlet

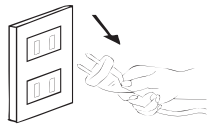

DANGER!
The vacuum cleaner is provided with a plug and an electric cable. If the plug or the cable are damaged a qualified electrician must be called to repair them.

ASSEMBLING THE VACUUM CLEANER CONT.

4. After vacuum cleaning
   1)Press the switch button on the handle, unplug the power cable, wrap the cable around the holder, then attach the handle and hose onto the body of the vacuum.
   2)Place the accessories back into the Mesh Tool Bag.
5.Clean up the dust by opening the front cover, taking out the dust bag, and then emptying the dust.

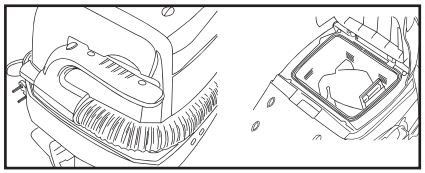

CAUTION!
Clean the filter regularly to make sure air flows smoothly. Manufacturer recommends the filter be changed with every 6th bag replacement.

CARE AND MAINTENANCE

Cleaning the Vacuum Cleaner

To clean the device casing switch off and disconnect the plug from the socket.

DANGER!
Never expose the vacuum cleaner to the effects of the weather (rain, etc.). No parts may be washed in a dish washer. The casing, dust collecting chamber, and filter chambers of the vacuum cleaner can be wiped with a damp cloth if required. No liquid must enter the vacuum cleaner in the process. Never use strong cleaning substance (scouring liquids, thinners), since these will corrode the plastic surface. Only place the plug back in the socket when you have made sure that all the parts are thoroughly dry. Hair and fluff may gather on the running wheels and on the floor nozzle of the vacuum cleaner in time. You should remove these to ensure that handling of the vacuum cleaner is always easy.

DANGER!
Never try to repair a defective device, or a device you believe to be defective, by yourself. You can put both yourself and future users in danger. Repairs may only be carried out by authorized specialists.

ASSEMBLING THE VACUUM CLEANER

CAUTION!
Before assembling or disassembling the accessories always ensure that the vacuum has been unplugged.

1.Take the power cord off of the holder. Put back pack vacuum cleaner on back and adjust the chest strap to fit your body.

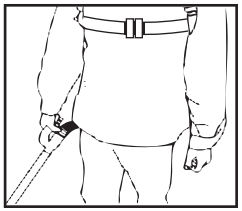

2. Pull out the handle and hose, attach accessories. Use different accessories according to different environment condition.

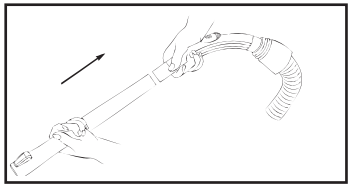

3. Insert the power cable to the outlet or power source, press the switch button on the handle and begin use.

CAUTION!
This device is equipped with a motor protective thermostat. If the device should overheat, the thermostat will automatically turn the device OFF. Should this occur, turn OFF the switch and unplug the device from the power socket. Allow device to cool, clean filters. To restart, re-plug into power socket and turn switch back ON.